


How to open and close a GE KeySafe™

OPEN BUTTON

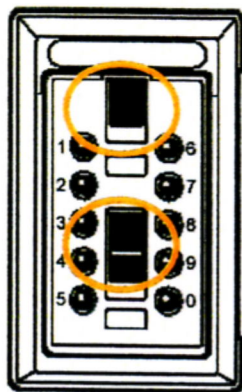

CLEAR BUTTON



KeySafe™

1. Before attempting to enter your set code always press the **CLEAR** Button (see above illustration).
2. The GE KeySafe is now ready for you to enter your code. When entering the digits of your code it is important that each button "**clicks**" when pressed.
3. Once you are confident that you have entered the code correctly you need to remove the lid. To do this you simply press and hold the **OPEN** button down and remove the lid.



If for any reason the OPEN button will not move down as you press it, please re-try the above 3 steps. You can press the CLEAR button at any time to try again.

When you want to close your GE KeySafe follow steps 1 & 2 from above with the lid of the GE KeySafe in your hand.

1. Once the code has been successfully entered into the lid offer the bottom of the lid into the vault, ensuring that the key is not obstructing the lid in any way.
2. Press and hold the OPEN button down and push the lid into the vault. Once you are happy that the lid is flush with the vault release the OPEN button and the latch will then return to its highest position thereby locking the lid in place.

